













 


 


 
 







 







 
 
 

 
 



 


 
 

 





 



 
 







Original	Substitut	Original	Substitut
 Power	 Power	 Exit/Back	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 P+	 Ch +
 6	 6	 P-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 [◀▶]	 PICTURE FORMAT
 0	 0	 → ◻ ←	 SEARCH TV/R
 Recall	 FAV PRE-CH	 [i+] / [≡i]	 DISPLAY INFO
 Source	 TIMER AV	 Text / [≡] / [≡] []	 REPEAT TEXT
 Menu/DVD	 TOP MENU MENU	 [] / [▼]	 []
 Guide	 - / - GUIDE	 [▶] / [I/II]	 PLAY MODE ▶
 [■][■■][■■■]	 ECO 3D	 [▶] / [I/II]	 SOUND DUAL










 



 



 







 




 






 

 
 

 
 
 


 
 
 
 

 




 




 













 



 




Original	Substitut	Original	Substitut
 <<< / [≡▶]	 <<<		
 <<< / [≡▶]	 SETTINGS  OPT Options		
 >>> / Subtitle	 AD  SUBT Subt		
 >>> / Subtitle	 >>>		
 ▲	 HOME  SMART Smart		
 ■ / [≡□]	 Stop		
 ■◀◀ / [≡↕]	 ZOOM  ▲ Eject		
 ■◀◀ / [≡↕]	 ◀◀ I<<		
 ▶▶ / [⊖][≡X]	 >>>		
 ▶▶ / [⊖][≡X]	 RETURN  BACK Back		
 Red	 A Red		
 Green	 B Green		
 Yellow	 C Yellow		
 Blue	 D Blue		


 

 

 
 









Original	Substitut	Original	Substitut
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	  / [v]	 Pause
 4	 4	  / I/II	 Play
 5	 5	  / I/II	 Dual
 6	 6	  / [≡●]	 <<<
 7	 7	  / [≡●]	 TV/R
 8	 8	  / Subtitle	 >>>
 9	 9	  / Subtitle	 Subt
 0	 0	  ▲	 Smart
 _ Menu/DVD	 Menu	  / [≡□]	 Stop
 - Exit/Back	 Exit	  / [≡⇅]	 Eject
 - Up	 Up	  / [≡⇅]	 I<<<
 Left	 Left	  / [⊙][≡X]	 >>>I
 OK	 Ok	  / [⊙][≡X]	 Back





Original	Substitut	Original	Substitut
 Power	 Power	  / 	 Pause
 Mute	 Mute	  / 	 Play
 1	 1	  / 	 Dual
 2	 2	  / 	 <<<
 3	 3	  / 	 TV/R
 4	 4	  / Subtitle	 >>>
 5	 5	  / Subtitle	 Subt
 6	 6	 ▲	 Smart
 7	 7	 ■ / 	 Stop
 8	 8	  / 	 Eject
 9	 9	  / 	 I<<<
 0	 0	  / 	 Back
 Source	 AV	  / 	 >>>I
 P+	 CH +		
 P-	 CH -		
 Vol-	 VOL -		
 Vol+	 VOL +		

