



















ORIGINAL	REPLACEMENT
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	AV
-/--	-/--
DISPLAY	
	
	
TEXT	
VOL+	VOL+
VOL-	VOL-
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
INFO	INFO
EPG	EPG

ORIGINAL	REPLACEMENT
PAUSE	
RED / ENTER	RED
GREEN / P. MODE	GREEN
YELLOW / ANA.	YELLOW
BLUE / S. MODE	BLUE
TV / AUDIO	SHIFT+MUTE
MENU 1	SHIFT+MENU
EXIT 1	SHIFT+EXIT
AUDIO SETING	SHIFT+1
I/II	SHIFT+2
9 PICTURE	SHIFT+9
	SHIFT+ 
	SHIFT+ 
SUBTITLE	SHIFT+ 
TEXT 1	SHIFT+ 
PAGE DOWN	SHIFT+DOWN
PAGE UP	SHIFT+UP
RECALL	SHIFT+BACK
	SHIFT+SLEEP
	SHIFT+INFO