

LG
TV
AKB69680403

Mandis Shop S.L.
Sant Cugat del Vallès - Barcelona
info@mandis.es



Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
	Power		P/Ch +	PR+/Page Up	
MUTE	Mute		P/Ch -	PR-/Page Down	
1	1		VOL +	Vol+	
2	2		VOL -	Vol-	
3	3			Up	
4	4			Down	
5	5		OK	OK	
6	6			Left	
7	7			Right	
8	8		MENU	Menu	
9	9		EXIT RETURN	Return	
0/10	0		TOP MENU	AV Mode	
1. GUIDE	List		PICT TITLE	Energy Saving	
2. FAV	Q.View		EPG	T.OPT/<<	
AUTO/TRK	Q.Menu		MARK	FAV/Mark	
SUBT	Subtitle/>>			Simplink	
AV Dvd/Tv	Input		ZOOM		
	Guide			Info	
TEXT	Text/[=]		RED	Red	
TV	TV/RAD		GREEN	Green/Stop	
BACK			YELLOW	Yellow/Play	
			BLUE	Blue/Pause	