













 
 

 






 
 


 














 


 
 


 
 

 



 



 

 






Original	Replacement	Original	Replacement
 Power	 Power	 Exit/Back	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 P+	 Ch +
 6	 6	 P-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 [<<>>]	 Format
 0	 0	 TV/R	 TV/R
 Recall	 Pre Ch	 [i+] / [≡i]	 Info
 Source	 AV	 Text / [≡] / [≡] [ ]	 Text
 Menu/DVD	 Menu	 Pause	 Pause
 Guide	 Guide	 Play / I/II	 Play
 [■][■■]	 3D	 Play / I/II	 Dual










 



 



 







 




 






 

 
 

 
 
 


 
 
 
 

 


























 




Original		Replacement		Original		Replacement	
	◀◀ / [≡⏪]		<<				
	▶▶ / [≡⏩]		Options				
	▶▶ / Subtitle		Subt				
	▶▶ / Subtitle		>>				
	▲		Smart				
	■ / [≡□]		Stop				
	◀◀◀ / [≡⇅]		Eject				
	◀◀◀ / [≡⇅]		I<<				
	▶▶▶ / [⊖][≡X]		>>I				
	▶▶▶ / [⊖][≡X]		Back				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				










 


 
 
 










 










 



Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	  / [v]	 Pause
 4	 4	  / I/II	 Play
 5	 5	  / I/II	 Dual
 6	 6	  / [≡●]	 <<<
 7	 7	  / [≡●]	 TV/R
 8	 8	  / Subtitle	 >>>
 9	 9	  / Subtitle	 Subt
 0	 0	  ▲	 Smart
 _ Menu/DVD	 Menu	  / [≡□]	 Stop
 - Exit/Back	 Exit	  / [≡⇅]	 Eject
 - Up	 Up	  / [≡⇅]	 I<<<
 Left	 Left	  / [⊙][≡X]	 >>>I
 OK	 Ok	  / [⊙][≡X]	 Back





Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute
 1	 1	 2	 2
 3	 3	 4	 4
 5	 5	 6	 6
 7	 7	 8	 8
 9	 9	 0	 0
 Source	 AV	 P+	 Ch +
 P-	 Ch -	 Vol-	 Vol -
 Vol+	 Vol +		

Original	Replacement	Original	Replacement
 Pause	 Pause	 Play	 Play
 Fast Forward	 Fast Forward	 Fast Reverse	 Fast Reverse
 Stop	 Stop	 Subtitles	 Subtitles
 Smart	 Smart	 Eject	 Eject
 Back	 Back	 Volume Up	 Volume Up
 Volume Down	 Volume Down		

