



 









 

 

 





 

 

 
 


Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 TXT	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Sustituto
 CEC	 Smart / List
 ?	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Back	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Vol+	 Vol+
 Source	 AV / Input / RDS
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer





Original	Sustituto	Original	Sustituto
 PR-	 CH- / Page-		
 I<	 I<< / Preset-		
 >I	 >>I / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 [ <> ]	 Picture / Format		
 Dialog	 Audio / Lang I/II		
 [...]	 Subtitle / EQ		
 Tv/Radio	 TV/Radio /		
 My Media	 Display / Media		

