 



 



 

























 

 

 

 

 



 



 

 
 






 

 
 
 

 





Original	Sustituto
 Open/Close	 Eject / Surround
 Input Select	 AV / Input / RDS
 HDMI	 Shift + 0
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Timer Prog	 Sleep / Timer
 Setup	 Setup / OPT /
 Prog+	 CH+ / Page+

Original	Sustituto
 Prog-	 CH- / Page-
 Clear	 Exit / Cancel / Clear
 [i+]/Info	 Info / Angle
 Text	 Text / Goto
 Variable Replay	 Picture / Format
 Variable Skip	 Zoom / Size
 Guide	 Guide / EPG / -/-
 Top Menu	 Shift + D.Menu / Top Menu
 Disc Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 Enter/OK	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search





Original	Sustituto
Green	Green / APP / Repeat
Yellow/Mode	Yellow / YouTube / Repeat
Blue/Search	Blue / Prime Video / Random
<</REV	<< / Tune-
Play	Play / Slow
>>/FWD	>> / Tune+
I<< Skip	I<< / Preset-
Stop	Stop / Hold
>>I Skip	>>I / Preset+
Pause	Pause / Step / Freeze
VCR	Shift + 4
HDD	Shift + 7
DVD	Shift + 2
Time Slip	TV/Radio /
Dubbing	Sound / Title
Rec Mode	Shift + Rec / Rec Mode
Rec	Rec / Rec Mode

Original	Sustituto
Subtitle	Subtitle / EQ
O)))/Audio	Audio / Lang I/II
SAT Link	Smart / List

