 



 

 
 
 



 

 



 

 

 


 












Original	Sustituto
 Source	 AV / Input / RDS
 Power	 Power
 TV	 TV/Radio /
 → [] ←	 D.Menu / Top
 [++]	 Picture / Format
 [▼]	 Shift + CH- /
 Subtitle	 Subtitle / EQ
 O / I	 Audio / Lang I/II
 3D	 Shift + 3
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 AD	 Eject / Surround
 0	 0
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 [i+]	 Info / Angle
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 Quick	 Display / Media
 Search	 Shift + Red / Netflix /
 Home	 Menu / Home
 [o]	 Zoom / Size
 Options	 Setup / OPT /
 Up	 Up
 ▲	 Shift + Up





Original	Sustituto
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
	 Shift + Vol-
 EXit	 Exit / Cancel / Clear
	 << / Tune-
	 Shift + << /
 Play	 Play / Slow
	 >> / Tune+
	 Shift + >> /
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+

Original	Sustituto
 List	 Smart / List
 Text	 Text / Goto
 Rec	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random

