



Original	Sustituto	Original	Sustituto
	Power		Power
	ATV/DTV		Smart / List
	Tv/DVD		Display / Media
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle
	Mute		Mute / Dimmer
	Tv/Radio		TV/Radio /
	Input		AV / Input / RDS
	Digital Menu		D.Menu / Top
	DVD Menu		Menu / Home
	Top Menu		Shift + D.Menu / Top Menu
	Guide		Guide / EPG / -/-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter/CH List		OK
	Menu/Setup		Setup / OPT /
	Exit/Cancel		Exit / Cancel / Clear
	Return		Back / Return





Original	Sustituto
	Play / Slow
	Stop / Hold
	I<< / Preset-
	<< / Tune-
	>> / Tune+
	>>I / Preset+
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Fav / Marker / PC
	Shift + Info / Angle
	Shift + Yellow / YouTube /
	Text / Goto
	Subtitle / EQ
	Audio / Lang I/II
	Zoom / Size

Original	Sustituto
	Sound / Title
	Picture / Format
	Sleep / Timer

