



 
 
 

 

 

 






 
 
 
 



 




 




 





 

 


Original	Sustituto
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 3D	 3D
 Mute	 Mute
 [i+]	 Info
 P+	 Ch +

Original	Sustituto
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu
 Home	 Smart
 Exit	 Exit
 Back	 Back
 Guide	 Guide
 Text	 Text
 [>]	 Options
 Quick	 TV/R
 */O	 Format





Original		Sustituto		Original	Sustituto
	Subtitle		Subt		
	O)/I/II		Dual		
	*/Q	 + 	Shift + Format		
	[+ +]		Eject		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Pause		Pause		
	Play		Play		
	Stop		Stop		
	Rec		Rec		
	>>		>>		
	<<		<<		

