







 
 


 
 
 

 
 


 

 

 


 




 


 
 
 

 
 







 



 
 


 
 

 
 
 
 

 

 
 




 



 








Original	Sustituto	Original	Sustituto
 Power	 Power	 CH+	 Ch +
 Source	 AV	 CH-	 Ch -
 Sleep	 Sleep	 Down	 Down
 Mute	 Mute	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Vol-	 Vol -
 3	 3	 Vol+	 Vol +
 4	 4	 Enter	 Ok
 5	 5	 Red	 Red
 6	 6	 Green	 Green
 7	 7	 Yellow	 Yellow
 8	 8	 Blue	 Blue
 9	 9	 Info	 Info
 0	 0	 EPG	 Guide
 -/--	 Shift + Guide	 Menu	 Menu
 Recall	 Pre Ch	 Nicam	 Media
 Up	 Up	 FAV+	 >>

Original	Sustituto	Original	Sustituto
 CH+	 Ch +	 TV	 AUX
 CH-	 Ch -	 DVD	 SAT
 Down	 Down	 PLAY MODE	 REC MODE
 Right	 Right	 >>>	 ■
 Left	 Left	 <<<	
 Vol-	 Vol -	 LIST	 SOUND
 Vol+	 Vol +	 DUAL	 SUBT
 Enter	 Ok	 PICTURE	 OPT
 Red	 Red	 FORMAT	 3D
 Green	 Green	 E-MANUAL	 REPEAT
 Yellow	 Yellow	 TEXT	 ZOOM
 Blue	 Blue	 TOP MENU	 TIMER
 Info	 Info	 DISPLAY	 AV
 EPG	 Guide	 MENU	 INFO
 Menu	 Menu	 CLEAR	 RETURN
 Nicam	 Media	 EXIT	 BACK
 FAV+	 >>	 HOME	 SMART
		 APP	 MEDIA
		 + VOL	 + CH
		 - VOL	 - CH
		 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		6	7
		7	8
		8	9
		9	0
		0	PRE-CH
		A	B
		B	C
		C	D
		D	





Original	Sustituto
FAV-	<<
TXT	REPEAT TEXT
EDITOR/GROUP	SETTINGS OPT
INDEX	RETURN BACK
LANG/AUDIO	SOUND DUAL
TV/RADIO	SEARCH TV/R
SUBTITLE	AD SUBT
SUBPAGE	SHIFT + AD SUBT
SIZE	PICTURE FORMAT
HOLD	ECO 3D
STILL	CLEAR EXIT
P.MODE	SHIFT + PICTURE FORMAT
S.MODE	SHIFT + SOUND DUAL

Original	Sustituto

