



Original	Sustituto
 Open/Close	 Eject / Surround
 Input Select	 AV / Input / RDS
 HDMI	 Shift + 0
 Standby	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Timer Prog	 Sleep / Timer
 Setup	 Setup / OPT /

Original	Sustituto
 0	 0
 Clear	 Exit / Cancel / Clear
 [i+]/Info	 Info / Angle
 Text	 Text / Goto
 Variable Replay	 Vol+
 Variable Skip	 Vol-
 Guide	 Guide / EPG / -/--
 Top Menu	 D.Menu / Top
 Disc Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search





Original	Sustituto	Original	Sustituto
	Green		Rec
	Yellow/Mode		Rec / Rec Mode
	Blue/Search		Subtitle / EQ
	Blue/Search		1.3x/0.8x PLayer
	<<		Shift + Play /
	Play		Audio / Lang I/II
	>>		Sat Link
	l<<		Smart / List
	Stop		
	>>l		
	Pause		
	VCR		
	HDD		
	DVD		
	Time Slip		
	Dubbing		
	Rec Mode		

