





 





 



 



 



 



 

 
 
 

 

 

 

 







 

 



 



 
 




 







Original	Sustituto	Original	Sustituto
 Power	 Power	 3	 3
 [i+]	 Info / Angle	 4	 4
 P.Info	 Display / Media	 5	 5
 ATV	 Shift + Smart / List	 6	 6
 DTV	 Smart / List	 7	 7
 SAT	 Shift + 0	 8	 8
 Radio	 TV/Radio /	 9	 9
 Power Source	 Shift + Power	 Return	 Shift + Back / Return
 << Source	 << / Tune-	 0	 0
 Play Source	 Play / Slow	 Source	 AV / Input / RDS
 >> Source	 >> / Tune+	 I/II/I-II	 Audio / Lang I/II
 Option Source	 Setup / OPT /	 [<I>]	 Picture / Format
 Rec Source	 Rec / Rec Mode	 AV Mode	 Shift + AV / Input / RDS
 Rec Stop	 Pause / Step / Freeze	 Eco	 Sound / Title
 Stop Source	 Stop / Hold	 Mute	 Mute / Dimmer
 1	 1	 Vol+	 Vol+
 2	 2	 PR+	 CH+ / Page+





Original	Sustituto	Original	Sustituto
	Text / Goto		Red / Netflix / Search
	Vol-		Green / APP / Repeat
	CH- / Page-		Yellow / YouTube / Repeat
	D.Menu / Top		Blue / Prime Video / Random
	Menu / Home		
	Guide / EPG / -/--		
	Up		
	Left		
	OK		
	Right		
	Exit / Cancel / Clear		
	Down		
	Back / Return		
	Subtitle / EQ		
	Eject / Surround		
	Sleep / Timer		
	Shift + Stop / Hold		

Hold

