 

 



 



























 

 



 





















 









| Original   | Sustituto   | Original  | Sustituto  |
|--|---|---|--|
|  Power    |  Power               |  0             |  0                          |
|  [=]      |  Text / Goto         |  Source        |  AV / Input / RDS           |
|  [=?]     |  D.Menu / Top        |  ATV           |  Shift + Smart / List       |
|  [...]    |  Subtitle / EQ       |  DTV           |  Shift + Display / Media    |
|  [=+]     |  Eject / Surround    |  EPG           |  Guide / EPG / -/-          |
|  [=o]     |  Sound / Title       |  Radio         |  TV/Radio /                 |
|  [=♦]     |  Zoom / Size         |  I/II/I+II/▼/O |  Audio / Lang I/II          |
|  1        |  1                   |  Vol+          |  Vol+                       |
|  2        |  2                   |  P+            |  CH+ / Page+                |
|  3        |  3                   |  P.Info        |  Display / Media            |
|  4       |  4                  |  Mute         |  Mute / Dimmer             |
|  5      |  5                 |  Vol-        |  Vol-                     |
|  6      |  6                 |  P-          |  CH- / Page-              |
|  7      |  7                 |  [i+]        |  Info / Angle             |
|  8      |  8                 |  [<>]        |  Picture / Format         |
|  9      |  9                 |  Sleep       |  Sleep / Timer            |
|  Recall |  Fav / Marker / PC |  AV Mode     |  Shift + AV / Input / RDS |





| Original | Sustituto                   |
|----------|-----------------------------|
|          | Menu / Home                 |
|          | Up                          |
|          | Left                        |
|          | OK                          |
|          | Right                       |
|          | Exit / Cancel / Clear       |
|          | Down                        |
|          | Back / Return               |
|          | Red / Netflix / Search      |
|          | Green / APP / Repeat        |
|          | Yellow / YouTube / Repeat   |
|          | Blue / Prime Video / Random |
|          | Smart / List                |
|          | Shift + Power               |
|          | << / Tune-                  |
|          | Play / Slow                 |
|          | >> / Tune+                  |

| Original | Sustituto      |
|----------|----------------|
|          | Setup / OPT /  |
|          | Rec / Rec Mode |
|          | Shift + Stop / |
|          | Stop / Hold    |

