



















 







 
 













Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV / Input / RDS
 ? / Audio	 Audio / Lang I/II
 PIP / Repeat	 Fav / Marker / PC
 PIP / Repeat	 Shift + Green / APP /
 [<>] / [...]	 Shift + Picture / Format
 [<>] / [...]	 Subtitle / EQ

Original	Sustituto
 Mute / [Q]	 Mute / Dimmer
 i	 Info / Angle
 Z / Back	 Back / Return
 CH+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 CH-	 CH- / Page-
 TXT/Menu	 Menu / Home
 TXT/Menu	 Text / Goto
 TV-G/Top Menu	 D.Menu / Top
 TV-G/Top Menu	 Guide / EPG / -/-
 Red / Eye	 Red / Netflix / Search











 































 

 









 
 






 







 

Original	Sustituto
Rec	Rec / Rec Mode
Green / Timer	Sleep / Timer
Play	Play / Slow
Green / Timer	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Pause	Pause / Step / Freeze
Blue / Audio	Shift + Audio / Lang I/II
Stop	Stop / Hold
Blue / Audio	Blue / Prime Video / Random
Scan	Smart / List
I<	I<< / Preset-
PAT	Eject / Surround
>I	>>I / Preset+
S	Sound / Title
<<	<< / Tune-
P	Picture / Format
>>	>> / Tune+

Original	Sustituto





Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV / Input / RDS
 i	 Info / Angle
 z	 Exit / Cancel / Clear
 Up	 Up
 CH+	 CH+ / Page+
 Left	 Left

Original	Sustituto
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Top Menu	 D.Menu / Top
 Red	 Red / Netflix / Search
 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat
 Play	 Play / Slow
 Yellow	 Yellow / YouTube / Repeat
 Pause	 Pause / Step / Freeze
 Blue	 Blue / Prime Video / Random
 Stop	 Stop / Hold
 I<	 I<< / Preset-





	Original	Sustituto	Original	Sustituto
	>	>> / Preset+		
	<<	<< / Tune-		
	>>	>> / Tune+		

