


 



 



 

 

 

 

 



 





 









 

 







 



 

 







 



 



 





 


Original	Sustituto	Original	Sustituto
 Power	 Power	 Prog-	 Ch -
 Open / Close	 Eject	 Time Slip	 Sleep
 Input Select	 AV	 Info	 Info
 HDMI	 Media	 Text	 Text
 1	 1	 Audio	 Dual
 2	 2	 Subtitle	 Subt
 3	 3	 Guide	 Guide
 4	 4	 Top Menu	 Menu
 5	 5	 Disc Menu	 D. Menu
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 SAT Link	 Smart	 Display	 Shift + Info
 Clear	 Exit	 Return	 Back
 Prog+	 Ch +	 Red	 Red





Original	Sustituto
 Green	 Green
 Yellow / Mode	 Yellow
 Blue / Search	 Blue
 Blue / Search	 TV/R
 << REV	 <<
 Play	 Play
 >> FWD	 >>
 I<< Skip	 I<<
 Stop	 Stop
 >>I Skip	 >>I
 Pause	 Pause
 VCR	 Vol +
 DVD	 Vol -
 Instant Skip	 3D
 Dubbing	 Format
 Rec	 Rec
 Rec Mode	 Shift + Rec

Original	Sustituto
 Setup	 Options
 Timer Set	 Shift + Smart
 Timer Prog	 Shift + Media
 1.3x/0.8x Play	 Shift + Play

