













 


 


 
 







 



 




 
 
 

 
 



 


 
 

 





 



 








Original	Sustituto	Original	Sustituto
 Power	 Power	 Exit/Back	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 P+	 Ch +
 6	 6	 P-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 [◀▶]	 Format
 0	 0	 → ◻ ←	 TV/R
 Recall	 FAV PRE-CH	 [i+] / [≡i]	 DISPLAY INFO
 Source	 TIMER AV	 Text / [≡] / [≡] [ ]	 REPEAT TEXT
 Menu/DVD	 TOP MENU MENU	 [  ] / [▶]	 [  ] Pause
 Guide	 -/-- GUIDE	 [▶] / [I/I]	 [▶] PLAY MODE
 [■][■■][■■■]	 ECO 3D	 [▶] / [I/I]	 [▶] SOUND DUAL









 




 

 







Original	Sustituto	Original	Sustituto
	<< / [≡○]		<<
	<< / [≡○]		Options
	>> / Subtitle		Subt
	>> / Subtitle		>>
	▲		Smart
	■ / [≡□]		Stop
	■◀◀ / [≡⇅]		Eject
	■▶▶ / [≡⇅]		I<<
	■▶▶ / [⊖][≡X]		>>I
	■▶▶ / [⊖][≡X]		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue











 





Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 _ Menu/DVD	 Menu
 - Exit/Back	 Exit
 - Up	 Up
 Left	 Left
 OK	 Ok














 
 

 



 



 


Original	Sustituto
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
  / [v]	 Pause
  / I/II	 Play
  / I/II	 Dual
  / [≡●]	 <<
  / [≡●]	 TV/R
  / Subtitle	 >>
  / Subtitle	 Subt
  ▲	 Smart
  / [≡□]	 Stop
  / [≡⇅]	 Eject
  / [≡⇅]	 I<<
  / [⊙][≡X]	 >>I
  / [⊙][≡X]	 Back







Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 P+	 Ch +
 P-	 Ch -
 Vol-	 Vol -
 Vol+	 Vol +

Original	Sustituto
  / [v]	 Pause
 / I/II	 Play
 / I/II	 Dual
 [≡] / [≡]	 <<<
 [≡] / [≡]	 TV/R
 / Subtitle	 >>>
 / Subtitle	 Subt
 ▲	 Smart
 [≡] / [≡]	 Stop
 [≡] / [≡]	 Eject
 [≡] / [≡]	 I<<<
 [⊙] / [≡X]	 Back
 [⊙] / [≡X]	 >>>I

