
 


 





 




 




Original	Sustituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Sustituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	






 

 



 




 




















 









 

 

 


 



 
 

 
 



 





Original	Sustituto	Original	Sustituto
 Yellow / Subtitle	 Subt		
 TV / AV	 AV		
 Green / P/N	 Green		
 SAT	 Media		
 TV / Radio	 TV/R		
 EPG	 Guide		





Original	Sustituto	Original	Sustituto
 Power	 Power	 CH+	 Ch +
 Red	 Red	 CH-	 Ch -
 Green	 Green	 Up	 Up
 Yellow	 Yellow	 Down	 Down
 Blue	 Blue	 Right	 Right
 TV/SAT	 AV	 Left	 Left
 TV/Radio	 TV/R	 OK	 Ok
 Zoom	 Eject	 Vol+	 Vol +
 List	 List	 Vol-	 Vol -
 Audio	 Dual	 P+	 P+
 EPG	 Guide	 P-	 P-
 Timer	 Shift + AV	 Recall	 Pre Ch
 Text	 Text	 FAV	 Shift + Pre Ch
 Exit	 Exit	 1	 1
 Menu	 Menu	 2	 2
 M/P	 Media	 3	 3
 Mute	 Mute	 4	 4





	Original		Sustituto	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	Info		Info	
	Pause		Pause	

	Original		Sustituto

