










 





Original	Sustituto
	Mute / Dimmer
	Power
	Audio / Lang I/II
	TV/Radio /
	Sound / Title
	Picture / Format
	Text / Goto
	Shift + Stop / Zoom /
	Back / Return
	Sleep / Timer
	1
	2
	3
	Info / Angle
	4
	5

Original	Sustituto
	6
	Shift + Yellow / YouTube /
	7
	8
	9
	AV / Input / RDS
	Guide / EPG / -/--
	0
	Exit / Cancel / Clear
	D.Menu / Top
	Fav / Marker / PC
	Setup / OPT /
	Shift + Fav / Marker / PC
	Vol+
	CH+ / Page+
	Vol-
	CH- / Page-






















Original	Sustituto
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Display / Media
	Left
	Right
	Zoom / Size
	Menu / Home
	Smart / List
	OK
	Up
	Subtitle / EQ
	>>I / Preset+
	Shift + Right
	Down
	Shift + CH+ /

Original	Sustituto
	I<< / Preset-
	Shift + Left
	Shift + Power
	Shift + CH- /
	<< / Tune-
	Play / Slow
	>> / Tune+
	Stop / Hold
	Pause / Step / Freeze























Original	Sustituto	Original	Sustituto
 Power Down	 Power		
 Prog+ Down	 CH+ / Page+		
 Prog- Down	 CH- / Page-		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 Rec	 Rec / Rec Mode		
 >>	 >> / Tune+		
 Play	 Play / Slow		
 <<	 << / Tune-		





Original	Sustituto	Original	Sustituto
 Power Down	 Power		
 Prog+ Down	 CH+ / Page+		
 Prog- Down	 CH- / Page-		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 Rec	 Rec / Rec Mode		
 >>	 >> / Tune+		
 Play	 Play / Slow		
 <<	 << / Tune-		





Original	Sustituto	Original	Sustituto
Power Down	Power		
Prog+ Down	CH+ / Page+		
Prog- Down	CH- / Page-		
<<<	<<< / Tune-		
Play	Play / Slow		
>>>	>>> / Tune+		
Stop	Stop / Hold		
Pause	Pause / Step / Freeze		
Rec	Rec / Rec Mode		

