




















Original	Sustituto
	Mute / Dimmer
	Power
	Audio / Lang I/II
	TV/Radio /
	Sound / Title
	Picture / Format
	Text / Goto
	Shift + Stop /
	Shift + Zoom /
	Back / Return
	Sleep / Timer
1	1
2	2
3	3
	Info / Angle
4	4
5	5

Original	Sustituto
6	6
A/B	Shift + Yellow / YouTube /
7	7
8	8
9	9
Output	AV / Input / RDS
-/--	Guide / EPG / -/--
0	0
C	Exit / Cancel / Clear
IN 123	D.Menu / Top
1-/TP Off	Fav / Marker / PC
C00	Setup / OPT /
2-/TP On	Shift + Fav / Marker / PC
Vol+	Vol+
Prog+	CH+ / Page+
Vol-	Vol-
Prog-	CH- / Page-





Original	Sustituto
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Display / Media
	Left
	Right
	Zoom / Size
	Menu / Home
	Smart / List
	OK
	Up
	Subtitle / EQ
	>>I / Preset+
	Shift + Right
	Down
	Shift + CH+ /

Original	Sustituto
	I<< / Preset-
	Shift + Left
	Shift + Power
	Shift + CH- /
	<< / Tune-
	Play / Slow
	>> / Tune+
	Stop / Hold
	Pause / Step / Freeze







