
























 









Original	Sustituto
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Back / Return
	 0
	 Info / Angle
	 Menu / Home
	 Exit / Cancel / Clear
	 Up

Original	Sustituto
	 Left
	 OK
	 Right
	 Shift + 0
	 Down
	 Fav / Marker / PC
	 TV / Radio /
	 Guide / EPG / -/-
	 Pause / Step / Freeze
	 AV / Input / RDS
	 Smart / List
	 Audio / Lang I/II
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Text / Goto
	 Blue / Prime Video / Random





Original

Sustituto

Original

Sustituto



 Blue / Audio R/L	 Sound / Title

