

 
 
 
 
 


 


 



 

 





 

 

 




	Original	Sustituto	Original	Sustituto
	Power			
	Mute			
	Menu			
	Z			
	TV-G			
	AV			
	OK			
	Up			
	CH+			
	CH-			
	Down			
	Right			
	Vol+			
	Vol-			
	Left	