




 










 









 



 








Original	Sustituto
	Power
	Exit
	Display
	TV/AV
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Recall
	Back
	Shift + Guide

Original	Sustituto
	Smart
	Eject
	Shift + Text
	Stop
	Media
	List
	Text
	D. Menu
	Shift + Exit
	Info
	Up
	Left
	Ok
	Right
	Down
	Pause
	Shift + Ch +





Original	Sustituto
 PGDN	 Shift + Ch -
 TV / Audio	 TV/R
 Audio Setting	 Options
 Text 1	 Shift + Subt
 EPG	 Guide
 Subtitle	 Subt
 9 Picture	 Shift + 9
 Sleep	 Sleep
 I/II	 Dual
 Mute	 Mute
 Red / Enter	 Red
 Green / P.Mode	 Green
 Green / P.Mode	 Format
 Yellow / ANA	 Yellow
 Blue / S.Mode	 Blue
 Blue / S.Mode	 Shift + Dual
 Up / P+	 Ch +

Original	Sustituto
 Up / P+	 Shift + Up
 Down / P-	 Ch -
 Down / P-	 Shift + Down
 Right / V+	 Vol +
 Right / V+	 Shift + Right
 Left / V-	 Vol -
 Left / V-	 Shift + Left
 Menu	 Menu
 Menu	 Shift + Ok

