 
 







 

 

 


 


 

 

 





 

 

 







Original	Sustituto	Original	Sustituto
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+

Original	Sustituto	Original	Sustituto
	Vol-		Vol-
	CH List		Smart / List
	CH-		CH- / Page-
	Sports		TV/Radio /
	Home		Menu / Home
	Guide		Guide / EPG / -/--
	Extra		Picture / Format
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Sustituto
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Settings	Setup / OPT /
AD/Subt.	Subtitle / EQ
Rec	Rec / Rec Mode
Stop	Stop / Hold
<</I<<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>/>>I	>> / Tune+

Original	Sustituto

