



Original	Sustituto
	Power
	Info / Angle
	Sleep / Timer
	Smart / List
	Display / Media
	Audio / Lang I/II
	Mute / Dimmer
	1
	2
	3
	Vol+
	4
	5
	6
	Vol-
	7
	8

Original	Sustituto
	9
	CH+ / Page+
	Back / Return
	0
	AV / Input / RDS
	CH- / Page-
	D.Menu / Top
	Picture / Format
	Shift + Fav / Marker / PC
	TV/Radio /
	Play / Slow
	Pause / Step / Freeze
	Up
	>>I / Preset+ button"/> >>I / Preset+
	Menu / Home
	<< / Tune-
	Left





Original	Sustituto
OK	OK
Right / >>	Right
Right / >>	>> / Tune+
End	Exit / Cancel / Clear
Down / <<	Down
Down / <<	<< / Preset-
Rec	Rec / Rec Mode
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
EPG	Guide / EPG / -/--
Text	Text / Goto
Reveal	Setup / OPT /
Subtitle	Subtitle / EQ
FAV	Fav / Marker / PC
Hold	Stop / Hold

Original	Sustituto
Timer	Shift + Sleep / Timer
Size	Zoom / Size

