
 








 

 
 



 
 

 
 





 

 


 




 






Original		Sustituto		Original		Sustituto	
	Power		Power		Vol-		Vol -
	Tv/Radio		TV/R		PG+		Ch +
	Mute		Mute		PG-		Ch -
	Info		Info		1		1
	Menu		Menu		2		2
	Exit		Exit		3		3
	FAV		Pre Ch		4		4
	P/L		Smart		5		5
	Teletext		Text		6		6
	M/A		Options		7		7
	ALT		Dual		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down				
	Right		Right				
	Left		Left				
	Vol+		Vol +				

