



 

 



 


 
 






 
 
 



















 


 

 
 

 

 



 










Original	Sustituto	Original	Sustituto
 Power	 Power	 TV / AV	 AV
 Mute	 Mute	 Red / Audio	 Red
 1	 1	 Red / Audio	 Dual
 2	 2	 Green / Text	 Green
 3	 3	 Green / Text	 Text
 4	 4	 Yellow / [ _ ]	 Yellow
 5	 5	 Yellow / [ _ ]	 Subt
 6	 6	 Blue / Timer	 Blue
 7	 7	 Blue / Timer	 Shift + AV
 8	 8	 EPG	 Guide
 9	 9	 Menu	 Menu
 0	 0	 Info	 Info
 TV / Radio	 TV/R	 Exit	 Exit
 ←PR	 Back	 Up / PR+	 Up
 ↑	 >>I	 Up / PR+	 Ch +
 ↓	 I<<	 Down / PR-	 Down
 Pause	 Pause	 Down / PR-	 Ch -





Original	Sustituto	Original	Sustituto
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK / List		Ok
	OK / List		List
	FAV		Pre Ch
	Sleep		Sleep
			Smart
	PAL / NTSC		Format

