



Original	Sustituto
 Open/Close	 Eject / Surround
 Input Select	 AV / Input / RDS
 HDMI	 Shift + 0
 Standby	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Timer Prog	 Sleep / Timer
 Setup	 Setup / OPT /

Original	Sustituto
 0	 0
 Clear	 Exit / Cancel / Clear
 [i+]/Info	 Info / Angle
 Text	 Text / Goto
 Variable Replay	 Vol+
 Variable Skip	 Vol-
 Guide	 Guide / EPG / -/--
 Top Menu	 D.Menu / Top
 Disc Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search





Original	Sustituto
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Red / Netflix /
	<< / Tune-
	Play / Slow
	>> / Tune+
	<< / Preset-
	Stop / Hold
	>>  / Preset+
	Pause / Step / Freeze
	Shift + 4
	Shift + 7
	Shift + 2
	TV/Radio /
	Picture / Format
	Shift + Rec / Rec Mode

Original	Sustituto
	Rec / Rec Mode
	Subtitle / EQ
	Shift + Play /
	Audio / Lang I/II
	Smart / List

