



Original		Sustituto		Original		Sustituto	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		P-		CH- / Page-
	1		1		Menu		Menu / Home
	2		2		Quick		Shift + Exit / Cancel / Clear
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		OK
	6		6		Right		Right
	7		7		Back		Back / Return
	8		8		Down		Down
	9		9		Exit		Exit / Cancel / Clear
	List		Smart / List		[i+]		Info / Angle
	0		0		[>]		Shift + Right
	Recall		Shift + Back / Return		Guide		Guide / EPG / -/-
	Vol+		Vol+		*/O		Setup / OPT /
	Mute		Mute / Dimmer		*/Q		Shift + Setup / OPT / Tools
	P+		CH+ / Page+		Text		Text / Goto





	Original	Sustituto	Original	Sustituto
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	O)I/II	Audio / Lang I/II		
	Subtitle	Subtitle / EQ		
	[+ +]	Display / Media		
<< button"/>	<<	<< / Tune-		
	Pause	Pause / Step / Freeze		
>> button"/>	>>	>> / Tune+		
	Rec	Rec / Rec Mode		
	Play	Play / Slow		
	Stop	Stop / Hold		

