






 

 





 





 



 

 














 


 
 
Original	Sustituto
 Power	 Power
 Open / Close	 Eject
 Input Select	 AV
 HDMI	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 SAT Link	 Smart
 Clear	 Exit
 Prog+	 Ch +

Original	Sustituto
 Prog-	 Ch -
 Time Slip	 Sleep
 Info	 Info
 Text	 Text
 Audio	 Dual
 Subtitle	 Subt
 Guide	 Guide
 Top Menu	 Menu
 Disc Menu	 D. Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display	 Shift + Info
 Return	 Back
 Red	 Red





Original	Sustituto
 Green	 Green
 Yellow / Mode	 Yellow
 Blue / Search	 Blue
 Blue / Search	 TV/R
 << REV	 <<
 Play	 Play
 >> FWD	 >>
 I<< Skip	 I<<
 Stop	 Stop
 >>I Skip	 >>I
 Pause	 Pause
 VCR	 Vol +
 DVD	 Vol -
 Instant Skip	 3D
 Dubbing	 Format
 Rec	 Rec
 Rec Mode	 Shift + Rec

Original	Sustituto
 Setup	 Options
 Timer Set	 Shift + Smart
 Timer Prog	 Shift + Media
 1.3x/0.8x Play	 Shift + Play

