



Original	Sustituto	Original	Sustituto
	Power		Power
	TV-Out		TV/R
	Audio		Dual
	Mode		3D
	Mute		Mute
	Sub-T		Subt
	Angle		Format
	Zoom		Eject
	Setup		Options
	Setup		Menu
	DVD Play		D. Menu
	DVD Play		Shift + Play
	Media Type		Media
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	<<		<<
	>>		>>
	>>		>>
	<<		<<
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Preview On/Off		Smart
	Repeat		Text
	Slideshow		List

