


Original	Sustituto
Open/Close	Eject / Surround
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	Guide / EPG / -/--
0	0
T/Search	Red / Netflix / Search
EPM	Picture / Format
EAM	Sound / Title
<I Slow	CH- / Page-

Original	Sustituto
Slow I>	CH+ / Page+
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
I<< Skip	I<< / Preset-
<</REV	<< / Tune-
FWD/>>	>> / Tune+
Skip >>I	>>I / Preset+
Up	Up
Left	Left
Enter	OK
Right	Right
Top Menu	D.Menu / Top
Down	Down

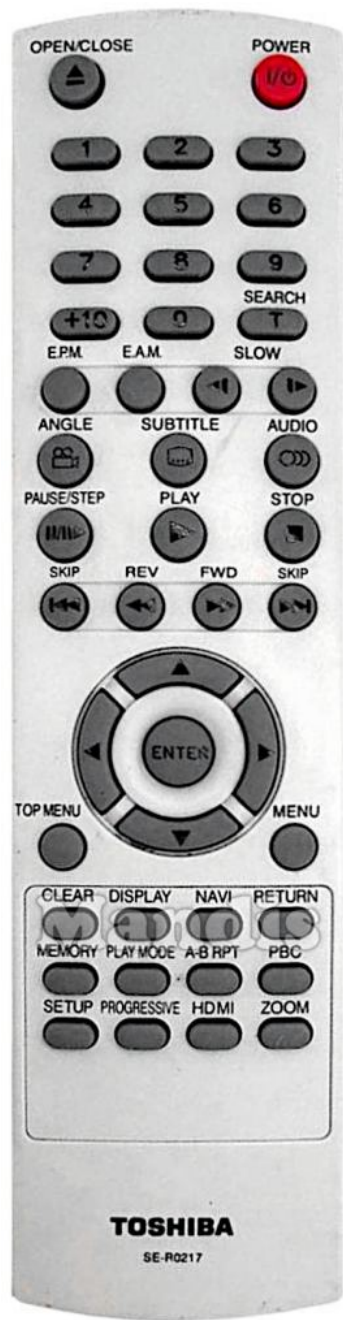



Original	Sustituto
 MENU	 Menu / Home
 Clear	 Exit / Cancel / Clear
 Display	 Display / Media
 Navi	 Smart / List
 Return	 Back / Return
 Memory	 Fav / Marker / PC
 Play Mode	 Shift + Play /
 A-B RPT	 Yellow / YouTube / Repeat
 PBC	 Blue / Prime Video / Random
 Setup	 Setup / OPT /
 Progressive	 Text / Goto
 HDMI	 Shift + 0
 HDMI	 AV / Input / RDS
 Zoom	 Zoom / Size

Original	Sustituto

