













 

 



 

 



 

 

 



 

 





Original	Substitut	Original	Substitut
	POWER		Power
	INFO		Info / Angle
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	SOURCE		AV / Input / RDS
	0		0
	AUDIO		Audio / Lang I/II
	FORMAT		Picture / Format
	BACK		Back / Return

Original	Substitut	Original	Substitut
	MENU		Menu / Home
	EXIT		Exit / Cancel / Clear
	UP		Up
	LEFT		Left
	ENTER		OK
	RIGHT		Right
	VOL+		Vol+
	DOWN		Down
	CH+		CH+ / Page+
	VOL-		Vol-
	CH-		CH- / Page-
	LIST		Smart / List
	SLEEP		Sleep / Timer
	EPG		Guide / EPG / -/-
	FAV		Fav / Marker / PC
	<<		<< / Tune-
	RED		Red / Netflix / Search





Original		Substitut		Original		Substitut	
	>>		>> / Tune+				
	GREEN		Green / APP / Repeat				
	I<<		I<< / Preset-				
	YELLOW		Yellow / YouTube / Repeat				
	BLUE		Blue / Prime Video / Random				
	>>I		>>I / Preset+				
	PLAY		Play / Slow				
	PAUSE		Pause / Step / Freeze				
	TEXT		Text / Goto				
	STOP		Stop / Hold				
	SUBTITLE		Subtitle / EQ				
	RADIO		TV/Radio /				
	OPT		Setup / OPT /				
	DMP		Display / Media				
	INDEX		D.Menu / Top				
	REC		Rec / Rec Mode				

