



Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<</[≡o]		<< / Tune-
	>>/[≡?]		>> / Tune+
	I<</[≡+]		I<< / Preset-
	>>I/[≡..]		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	[≡i]		Smart / List
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	Freeze		Shift + Pause / Step / Freeze
	Info		Info / Angle
	[]/Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	EPG		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	FAV		Fav / Marker / PC
	CH+		CH+ / Page+
	Vol-		Vol-
	REP/Rec		Rec / Rec Mode
	CH-		CH- / Page-
	1		1








 





Original	Substitut	Original	Substitut
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
0	0	HDMI - BAT 0	0
RECALL	Recall	RETURN BACK	Back / Return

Original	Substitut


















 





Original	Substitut	Original	Substitut
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1

Original	Substitut	Original	Substitut
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1






































Original	Substitut	Original	Substitut
2	 2	2	
3	 3	3	
4	 4	4	
5	 5	5	
6	 6	6	
7	 7	7	
8	 8	8	
9	 9	9	
EPG	 Guide / EPG / -/--		
0	 0	0	
FAV	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
<</Hold	 Shift + Stop /		
FAV-	 Shift + Left		

Original	Substitut	Original	Substitut
FAV+	 Shift + Right		
-/--	 Shift + Guide / EPG / -/--		



















Original	Substitut	Original	Substitut
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4

Original	Substitut	Original	Substitut
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4





Original	Substitut	Original	Substitut
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Epg	 Guide / EPG / -/--		
0	 0		
Fav	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Freeze	 Shift +  Pause / Step /		

