 



 

 





 









 

 



 



 









 





 









 



 

 

 











 



























 



	Original	Substitut		Original	Substitut
	 Power	 Power		 0	 0
	 Sleep	 Sleep / Timer		 Back	 Back / Return
	 Mute	 Mute / Dimmer		 Menu	 Menu / Home
	 Source	 AV / Input / RDS		 CH-	 CH- / Page-
	 1	 1		 Up	 Up
	 2	 2		 CH+	 CH+ / Page+
	 3	 3		 Left	 Left
	 Audio/Lang	 Audio / Lang I/II		 Enter	 OK
	 4	 4		 Right	 Right
	 5	 5		 Vol-	 Vol-
	 6	 6		 Down	 Down
	 Tv/Radio	 TV/Radio /		 Vol+	 Vol+
	 7	 7		 Setup	 Setup / OPT /
	 8	 8		 Play/Timeshift	 Play / Slow
	 9	 9		 Pause	 Pause / Step / Freeze
	 Exit	 Exit / Cancel / Clear		 Stop	 Stop / Hold
	 CH.List	 Smart / List		 Eject	 Eject / Surround





Original	Substitut
 Rec	 Rec / Rec Mode
 Text	 Text / Goto
 <<	 << / Tune-
 >>/Reveal	 >> / Tune+
 I<</Hold	 I<< / Preset-
 >>I/Sub.P	 >>I / Preset+
 SUB.T	 Subtitle / EQ
 Index/Title	 Shift + Sound / Title
 Size/Zoom	 Zoom / Size
 D.Menu	 D.Menu / Top
 EPG	 Guide / EPG / -/--
 FAV/Prog	 Fav / Marker / PC
 P.Mode/Lang	 Picture / Format
 S.Mode/Search	 Sound / Title
 Info/Display	 Info / Angle
 Red/Angle	 Red / Netflix / Search
 Green/Slow	 Green / APP / Repeat

Original	Substitut
 Yellow/A-B	 Yellow / YouTube / Repeat
 Blue/Repeat	 Blue / Prime Video / Random

