
 






 






 
 


 

 




Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	CH List		Shift + Smart / List
	CH List		Display / Media
	P-		CH- / Page-
	Menu		Menu / Home
	Smart Hub		Smart / List
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search





Original		Substitut	
B	Green/B	APP REPEAT	Green / APP / Repeat
C	Yellow/C	YouTube REPEAT A-B	Yellow / YouTube / Repeat
D	Blue/D	Prime Video RANDOM	Blue / Prime Video / Random
E-MANUAL	E-Manual	TOP MENU D.MENU	D.Menu / Top
SPORTS	Sports	PROGRAM TV/RADIO	TV/Radio /
AD/SUBT.	AD/SUBT	EQ SUBTITLE	Subtitle / EQ
AD/SUBT.	AD/SUBT	LANG I/II AUDIO	Audio / Lang I/II
[Stop]	Stop	HOLD [Stop]	Stop / Hold
[Tune-]	<<	TUNE- [Tune-]	<< / Tune-
[Tune-]	I<<	PRESET- [Tune-]	I<< / Preset-
[Play]	Play	SLOW [Play]	Play / Slow
[Pause]	Pause	STEP-FREEZE [Pause]	Pause / Step / Freeze
[Tune+]	>>	TUNE+ [Tune+]	>> / Tune+
[Tune+]	>>I	PRESET+ [Tune+]	>>I / Preset+

Original		Substitut	

