 









 


 




 















 
 









 
 





Original		Substitut		Original		Substitut	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		Swap		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV		Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix /
	8		8		Return		Back / Return



