

 
 


 
 
 

 
 





 




 
 
 

 
 
 




 


 

 
 

 




 

 





 


 




 

 






 

 
 



 
 





Original	Substitut	Original	Substitut
	Power		Power
	[i]/Info		Info
	Mute		Mute
	I-II		Dual
	OK/Select		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-/+10	 + 	Shift + Guide
	Exit		Exit

Original	Substitut	Original	Substitut
	Menu		Menu
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio		Yellow
	Blue/Angle		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<

 




Original		Substitut		Original	Substitut
	>>		>>		
	[TV]		TV/R		
	D-Menu		Smart		
	TV		Media		
	AV		AV		
	P<P		Pre Ch		
	PP		D. Menu		
	[≡]		Text		
	[≡o]		Subt		
	[≡+]		Format		
	[≡x]		3D		
	[≡◆]/Wide		Shift + Format		
	[≡?]		Options		
	[≡i]/Guide		Guide		
	[:::]/Subtitle		Back		






 
 


 










 
 


Original	Substitut	Original	Substitut
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/+10		Guide
	Exit		Exit
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio	 + 	Shift + Yellow
	Blue/Angle		Blue

Original	Substitut	Original	Substitut
	Stop		Stop
	Play		Play
	Pause		Pause
	D-Menu		Smart
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Time	 + 	Shift + AV
	Zoom	 + 	Shift + Eject
	Program		Sleep
	Search Mode		AV
	Repeat		Text
	A-B	 + 	Shift + Play
	C		Yellow
	Title		Info
	Display	 + 	Shift + Info





	Original	Substitut	Original	Substitut
	Open/Close	 ZOOM		Eject
	Menu	 TOP MENU MENU		Menu
	Select	 OK		Ok
	Up			Up
	Down			Down
	Left			Left
	Right			Right
	Vol+	 VOL		Vol +
	Vol-	 VOL		Vol -
	Mute	 MUTE		Mute

