




 















 





 




Original	Substitut
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Recall
	TV
	Menu
	Q.Menu
	World

Original	Substitut
	Power
	AV
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Pre Ch
	TV/R
	Menu
	D. Menu
	Shift + Guide

Original	Substitut
	OK
	Up
	Down
	Right
	Left
	PR+
	PR-
	Vol+
	Vol-
	Exit
	Back
	Mute
	i
	Guide
	[≡]/Text
	Folder
	[-O-]

Original	Substitut
	Ok
	Up
	Down
	Right
	Left
	Ch +
	Ch -
	Vol +
	Vol -
	Exit
	Back
	Mute
	Info
	Guide
	Text
	Format
	Subt





Original		Substitut		Original	Substitut
	*/O		Sleep		
	*/Q		Eject		
	Netflix		Media		
	Camera-Music-Ph		Options		
	YouTube		3D		
	[≡]..		List		
	Lang		Dual		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Play		Play		
	Rec		Rec		
	Pause		Pause		
	>>		>>		
	<<		<<		
	Stop		Stop		

