



Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Netflix	 Shift + Red / Netflix /	 i	 Info / Angle
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Up	 Up
 4	 4	 Q.Menu	 D.Menu / Top
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Back	 Back / Return
 9	 9	 Down	 Down
 TV	 TV/Radio /	 EXit	 Exit / Cancel / Clear
 0	 0	 World	 Smart / List
 Recall	 Fav / Marker / PC	 Camera/Music/Ph	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 */o	 Picture / Format
 PR+	 CH+ / Page+	 Games	 AV / Input / RDS

Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Netflix	 Shift + Red / Netflix /	 i	 Info / Angle
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Up	 Up
 4	 4	 Q.Menu	 D.Menu / Top
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Back	 Back / Return
 9	 9	 Down	 Down
 TV	 TV/Radio /	 EXit	 Exit / Cancel / Clear
 0	 0	 World	 Smart / List
 Recall	 Fav / Marker / PC	 Camera/Music/Ph	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 */o	 Picture / Format
 PR+	 CH+ / Page+	 Games	 AV / Input / RDS





Original	Substitut	Original	Substitut
 [=]/Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Lang	 Audio / Lang I/II		
 [=]..	 Subtitle / EQ		
 [-O-]	 Zoom / Size		
 <<<	 <<< / Tune-		
	 Pause / Step / Freeze		
 >>>	 >>> / Tune+		
 Rec	 Rec / Rec Mode		
 ▶	 Play / Slow		
 ■	 Stop / Hold		

