




 

 




Original	Substitut
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 O)/I-II/Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Original	Substitut
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH+	 CH+ / Page+
 Index	 Display / Media
 Vol+	 Vol+
 CH-	 CH- / Page-
 List	 Smart / List
 Vol-	 Vol-
 ♥	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 <<	 << / Tune-





Original	Substitut	Original	Substitut
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 Text / Play/Pause	 Play / Slow	 Right	 Right
 Text / Play/Pause	 Pause / Step / Freeze	 Exit	 Exit / Cancel / Clear
 Stop / Still	 Stop / Hold	 Down	 Down
 Rec	 Rec / Rec Mode	 Recall	 Back / Return
 Audio I/II	 Audio / Lang I/II	 Vol +	 Vol+
 Subtitle / [≡o]	 Subtitle / EQ	 List	 Smart / List
 [≡x]	 Picture / Format	 CH +	 CH+ / Page+
 Size / Aspect	 Zoom / Size	 Vol -	 Vol-
 Sleep	 Sleep / Timer	 Index	 Display / Media
 Radio	 TV/Radio /	 CH -	 CH- / Page-
 DMP	 D.Menu / Top	 1	 1
 Source	 AV / Input / RDS	 2	 2
 Menu	 Menu / Home	 3	 3
 Up	 Up	 4	 4
 Info	 Info / Angle	 5	 5



