 

 



 



 

 

 





 

 

 



 

 




 

 

 

 

 




 


 




 






Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[TV]		TV/Radio /
	Internet		Smart / List
	↔		Fav / Marker / PC
	Mute		Mute / Dimmer
	Vol+		Vol+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	OK		OK
	Menu		Menu / Home
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Q.Menu		D.Menu / Top
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	i		Info / Angle
	EPG		Guide / EPG / -/-
	TXT		Text / Goto
	Lang.		Audio / Lang I/II
	Subt.		Subtitle / EQ





Original	Substitut	Original	Substitut
	Red		Red / Netflix / Search
	[>]		Picture / Format
	[+]		Zoom / Size
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	*1/O		Shift + 1
	*2/Q		Shift + 2
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	<<		<< / Tune-
	Stop		Stop / Hold

