

 





Original	Substitut	Original	Substitut
 Power	 Power	 Info	 Info / Angle
 Open/Close	 Eject / Surround	 Pause	 Pause / Step / Freeze
 DVD	 2	 TV CH+	 CH+ / Page+
 USB	 8	 >>	 >> / Tune+
 HDMI Sel.	 0	 Tv Vol-	 Vol-
 Marker	 Fav / Marker / PC	 I<<	 I<< / Preset-
 EZ View	 Display / Media	 Stop	 Stop / Hold
 Video Sel.	 4	 Play	 Play / Slow
 Repeat	 Green / APP / Repeat	 >>I	 >>I / Preset+
 A-B Repeat	 Yellow / YouTube / Repeat	 TV CH-	 CH- / Page-
 Subtitle	 Subtitle / EQ	 Menu	 Menu / Home
 Disc Menu	 D.Menu / Top	 Up	 Up
 Title Menu	 Smart / List	 Return	 Back / Return
 Tv Source	 AV / Input / RDS	 Left	 Left
 Audio	 Audio / Lang I/II	 Enter	 OK
 Tv Vol+	 Vol+	 Right	 Right
 <<	 << / Tune-	 Tools	 Setup / OPT /





Original	Substitut	Original	Substitut
	Down		Down
	Exit		Exit / Cancel / Clear

