



Original	Substitut	Original	Substitut
Power	Power	I<</<<	I<<
Open/Close	Eject	Stop	Stop
1	1	Play	Play
2	2	Pause	Pause
3	3	>>I/>>	>>I
4	4	Return	Back
5	5	[II]/Menu	Menu
6	6	Info	Info
7	7	Disc Menu	D. Menu
8	8	Up	Up
9	9	Down	Down
0	0	Right	Right
Prog	Sleep	Left	Left
Clear	Exit	Enter	Ok
Step	Guide	A-B/Repeat	AV
Instant Replay	Format	EZ View	Smart
Instant Skip	3D	Subtitle	Subt

Original	Substitut	Original	Substitut
I<</<<	I<<	Stop	Stop
Play	Play	Pause	Pause
>>I/>>	>>I	Return	Back
[II]/Menu	Menu	Info	Info
Disc Menu	D. Menu	Up	Up
Down	Down	Right	Right
Left	Left	Enter	Ok
A-B/Repeat	AV	EZ View	Smart
Subtitle	Subt		



