





 

















 














Original	Substitut	Original	Substitut
 CALL	Call/[≡i]	 ANGLE INFO	Info / Angle
 [≡]/[ /≡]/[ ]	[≡]/[ /≡]/[ ]	 GOTO TEXT	Text / Goto
 Power	Power	 Power	Power
 1	1	 TV 1	1
 2	2	 DVD 2	2
 3	3	 CD - STB 3	3
 4	4	 VIDEO 4	4
 5	5	 TAPE 5	5
 6	6	 TUNER 6	6
 7	7	 AUX - HDD 7	7
 8	8	 USB 8	8
 9	9	 BLUETOOTH 9	9
 Recall	Recall	 RETURN BACK	Back / Return
 0	0	 HDMI - SAT 0	0
 Source/[≡o]	Source/[≡o]	 RDS AV INPUT	AV / Input / RDS
 → / ←	→ / ←	 FORMAT PICTURE	Picture / Format
 → J ←	→ J ←	 TITLE SOUND	Sound / Title

Original	Substitut	Original	Substitut
 MENU	Menu	 HOME MENU	Menu / Home
 EXIT	Exit	 CLEAR EXIT CANCEL	Exit / Cancel / Clear
 P+	P+	 CH PAGE	CH+ / Page+
 Up	Up	 Up	Up
 Left	Left	 Left	Left
 Vol-	Vol-	 VOL	Vol-
 OK	OK	 OK	OK
 Vol+	Vol+	 VOL	Vol+
 Right	Right	 Right	Right
 P-	P-	 CH PAGE	CH- / Page-
 Down	Down	 Down	Down
 Red	Red	 NETFLIX SEARCH	Red / Netflix / Search
 Blue	Blue	 Prime Video RANDOM	Blue / Prime Video / Random
 Green	Green	 APP REPEAT	Green / APP / Repeat
 Yellow	Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
 O) /	O) /	 LANG I/II AUDIO	Audio / Lang I/II
 [<>]	[<>]	 SHIFT + FORMAT PICTURE	Shift + Picture / Format



