











Original	Substitut
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Menu	 Menu / Home
 0	 0
 Exit	 Exit / Cancel / Clear
 Up	 Up
 CH+	 CH+ / Page+
 Vol-	 Vol-

Original	Substitut
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Right	 Right
 CH-	 CH- / Page-
 Down	 Down
 EPG	 Guide / EPG / -/--
 Red	 Red / Netflix / Search
 TTX	 Text / Goto
 Blue	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Subtitle	 Subtitle / EQ
 i	 Info / Angle
 FAV	 Fav / Marker / PC
 Tv/Radio	 TV/Radio /





Original	Substitut	Original	Substitut
VIDEO	Video	SHIFT + 4	Shift + 4
SCAN	Scan	RDS AV INPUT	AV / Input / RDS
RECORD	Record	REC MODE	Rec / Rec Mode
DEVICE	Device	LIST SMART	Smart / List
FILE	File	MEDIA DISPLAY	Display / Media
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
PREV	Prev	PRESET-	I<< / Preset-
NEXT	Next	PRESET+	>>I / Preset+
ROLL	Roll	TITLE SOUND	Sound / Title
▶/	Play	SLOW	Play / Slow
▶/	Pause	STEP-FREEZE	Pause / Step / Freeze
<<	<<	TUNE-	<< / Tune-
>>	>>	TUNE+	>> / Tune+

