



Original	Substitut	Original	Substitut
Standby	Power	CH+	CH+ / Page+
Mute	Mute / Dimmer	Vol-	Vol-
1	1	Display	Display / Media
2	2	CH-	CH- / Page-
3	3	Up	Up
4	4	Left	Left
5	5	OK/Enter	OK
6	6	Right	Right
7	7	Menu	Menu / Home
8	8	Down	Down
9	9	Exit	Exit / Cancel / Clear
0	0	Source	AV / Input / RDS
-/-	Shift + Guide / EPG / -/-	P.Mode	Picture / Format
Recall	Back / Return	S.Mode	Sound / Title
Vol+	Vol+	Sleep	Sleep / Timer
I/II/Audio	Audio / Lang I/II	Play/Pause / Size	Zoom / Size
Auto	Smart / List	Play/Pause / Size	Play / Slow

Original	Substitut	Original	Substitut
Standby	Power	CH+	CH+ / Page+
Mute	Mute / Dimmer	Vol-	Vol-
1	1	Display	Display / Media
2	2	CH-	CH- / Page-
3	3	Up	Up
4	4	Left	Left
5	5	OK/Enter	OK
6	6	Right	Right
7	7	Menu	Menu / Home
8	8	Down	Down
9	9	Exit	Exit / Cancel / Clear
0	0	Source	AV / Input / RDS
-/-	Shift + Guide / EPG / -/-	P.Mode	Picture / Format
Recall	Back / Return	S.Mode	Sound / Title
Vol+	Vol+	Sleep	Sleep / Timer
I/II/Audio	Audio / Lang I/II	Play/Pause / Size	Zoom / Size
Auto	Smart / List	Play/Pause / Size	Play / Slow





Original	Substitut		
SIZE ▶❥	Play/Pause / Size	STEP - FREEZE ⏸	Pause / Step / Freeze
HOLD ■	Stop/Hold	HOLD ■	Stop / Hold
TEXT ⦿	Text	GOTO TEXT	Text / Goto
SUBTITLE ⦿	Subtitle	EQ SUBTITLE	Subtitle / EQ
INDEX ⏮	<</Index	TUNE- ⏮	<< / Tune-
REVEAL ▶▶	>>/Reveal	TUNE+ ▶▶	>> / Tune+
SUBPAGE ⏮	<</Subpage	PRESET- ⏮	<< / Preset-
FAV ▶▶	>> /FAV	PRESET+ ▶▶	>>  / Preset+
FAV ▶▶	>> /FAV	PC FAV MARKER	Fav / Marker / PC
MEDIA ⦿	Media	SHIFT + MEDIA DISPLAY	Shift + Display / Media
REC ⦿	Rec	REC MODE ●	Rec / Rec Mode
EPG ⦿	EPG	-/- GUIDE EPG	Guide / EPG / -/-
TVRADIO ⦿	Tv/Radio	PROGRAM TV/ RADIO	TV/Radio /
Red ●	Red	NETFLIX SEARCH	Red / Netflix / Search
Green ●	Green	APP REPEAT	Green / APP / Repeat
Yellow ●	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue ●	Blue	Prime Video RANDOM	Blue / Prime Video / Random

Original	Substitut

