



Original	Substitut	Original	Substitut
 Power	 Power	 Search	 Red / Netflix / Search
 Open/Close	 Eject / Surround	 Setup	 Setup / OPT /
 OSD	 Display / Media	 Menu	 Menu / Home
 1	 1	 Title	 Sound / Title
 2	 2	 Subtitle	 Subtitle / EQ
 3	 3	 Angle	 Info / Angle
 V-Mode	 Picture / Format	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Right	 Right
 P/N	 Text / Goto	 Down	 Down
 7	 7	 PBC	 Smart / List
 8	 8	 USB/Card	 AV / Input / RDS
 9	 9	 Zoom	 Zoom / Size
 Program	 TV/Radio /	 <<	 << / Tune-
 0	 0	 Play	 Play / Slow
 10+	 Guide / EPG / -/--	 Pause	 Pause / Step / Freeze





Original	Substitut	Original	Substitut
	I<<		I<< / Preset-
	>>		>> / Tune+
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Audio		Audio / Lang I/II
	Slow-B		CH- / Page-
	Slow-F		CH+ / Page+
	Return		Back / Return
	L/R		D.Menu / Top
	A-B		Yellow / YouTube / Repeat
	Step		Shift + Pause / Step /
	Vol+		Vol+
	Mute		Mute / Dimmer
	Repeat		Green / APP / Repeat
	Shuffle		Blue / Prime Video / Random
	Vol-		Vol-

Original	Substitut

