
 





 

 











 

 













Original	Substitut
 Power	 Power
 Open/Close	 Eject / Surround
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3
 V-Mode	 Picture / Format
 4	 4
 5	 5
 6	 6
 P/N	 Text / Goto
 7	 7
 8	 8
 9	 9
 Program	 TV/Radio /
 0	 0
 10+	 Guide / EPG / -/-

Original	Substitut
 Search	 Red / Netflix / Search
 Setup	 Setup / OPT /
 Menu	 Menu / Home
 Title	 Sound / Title
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 PBC	 Smart / List
 USB/Card	 AV / Input / RDS
 Zoom	 Zoom / Size
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze





Original	Substitut
	PRESET- / I<< / Preset-
	TUNE+ / >> / Tune+
	HOLD / Stop / Hold
	PRESET+ / >>I / Preset+
AUDIO	LANG I/II / Audio / Lang I/II
SLOW-B	CH PAGE / CH- / Page-
SLOW-F	+ CH PAGE / CH+ / Page+
RETURN	RETURN BACK / Back / Return
L/R	TOP MENU D.MENU / D.Menu / Top
A-B	YouTube REPEAT A-B / Yellow / YouTube / Repeat
STEP	SHIFT + STEP-FREEZE / Shift + Pause / Step / Step /
	+ VOL / Vol+
MUTE	DIMMER MUTE / Mute / Dimmer
REPEAT	APP REPEAT / Green / APP / Repeat
SHUFFLE	Prime Video RANDOM / Blue / Prime Video / Random
	VOL / Vol-

Original	Substitut

