

 
 






 
 





 



 

 










 
 

























 
 


 

 
 
 
 
 




| Original | Substitut | Original | Substitut |
|--|---|---|--|
|  Power |  Power |  Menu |  Menu |
|  Mute |  Mute |  EPG |  Guide |
|  1 |  1 |  Exit |  Exit |
|  2 |  2 |  Up / CH + / I<< |  Up |
|  3 |  3 |  Down / CH - / >>I |  Down |
|  4 |  4 |  Right / Vol + |  Right |
|  5 |  5 |  Left / Vol - |  Left |
|  6 |  6 |  OK |  Ok |
|  7 |  7 |  Up / CH + / I<< |  I<< |
|  8 |  8 |  Down / CH - / >>I |  >>I |
|  9 |  9 |  Up / CH + / I<< |  Ch + |
|  0 |  0 |  Down / CH - / >>I |  Ch - |
|  FAV |  Shift + Pre Ch |  Left / Vol - |  Vol - |
|  Recall |  Pre Ch |  Right / Vol + |  Vol + |
|  Game |  Media |  Red / Zoom |  Red |
|  Auto |  Smart |  Green / Lan/Audio |  Green |
|  Info |  Info |  Yellow / |  Yellow |

| Original | Substitut | Original | Substitut |
|--|---|---|--|
|  Power |  Power |  Menu |  Menu |
|  Mute |  Mute |  EPG |  Guide |
|  1 |  1 |  Exit |  Exit |
|  2 |  2 |  Up / CH + / I<< |  Up |
|  3 |  3 |  Down / CH - / >>I |  Down |
|  4 |  4 |  Right / Vol + |  Right |
|  5 |  5 |  Left / Vol - |  Left |
|  6 |  6 |  OK |  Ok |
|  7 |  7 |  Up / CH + / I<< |  I<< |
|  8 |  8 |  Down / CH - / >>I |  >>I |
|  9 |  9 |  Up / CH + / I<< |  Ch + |
|  0 |  0 |  Down / CH - / >>I |  Ch - |
|  FAV |  Shift + Pre Ch |  Left / Vol - |  Vol - |
|  Recall |  Pre Ch |  Right / Vol + |  Vol + |
|  Game |  Media |  Red / Zoom |  Red |
|  Auto |  Smart |  Green / Lan/Audio |  Green |
|  Info |  Info |  Yellow / |  Yellow |



Play/Pause

