



Original	Substitut
Power	Power
Open/Close	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
AV / Input	AV
<< Scan	<<
Scan >>	>>
I<< Skip	I<<
Skip >>I	>>I

Original	Substitut
Pause / Step	Pause
Play	Play
Stop	Stop
Home	Smart
Menu / List	Menu
List	List
Up	Up
PR / CH+	Ch +
PR / CH-	Ch -
Down	Down
Right	Right
Left	Left
Enter	Ok
Display	Info
Return	Back
O))) / Audio	Dual
[...] / Subtitle	Subt





Original	Substitut		
ZOOM	Zoom	SHIFT + ZOOM	Shift + Eject
SETUP	Setup	SETTINGS OPT	Options
REC	Rec	REC MODE	Rec
REC MODE	Rec Mode	SHIFT + REC MODE	Shift + Rec
THUMBNAI	Thumbnail	PICTURE FORMAT	Format
CHP.ADD	CHP.ADD	REPEAT TEXT	Text
PLAY MODE	Play Mode	SHIFT + PLAY MODE	Shift + Play
CLEAR	Clear	CLEAR EXIT	Exit
TITLE	Title	- / - GUIDE	Guide
TV/DVD	TV / DVD	SEARCH TV/R	TV/R
POWER TV	Power TV	SHIFT + POWER	Shift + Power
PR/CH	PR / CH+ TV	SHIFT + + CH	Shift + Ch +
	PR / CH- TV	SHIFT + - CH	Shift + Ch -
VOL	Vol+ TV	+ VOL	Vol +
	Vol- TV	VOL -	Vol -
AV/INPUT	AV / Input TV	SHIFT + TIMER AV	Shift + AV

Original	Substitut

